

Interactive Cup Brewer™

USER CARD



The Interactive Cup is fully automatic, so there's no measuring, no separate grinding and no mess - just a consistently delicious cup of quality coffee or cocoa.

 
 
Brewing Instructions

*** choose a size ***

Place your cup:

Center your cup or mug on the cup stand

Raise the cup stand and place your carafe on the drip tray

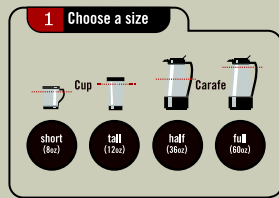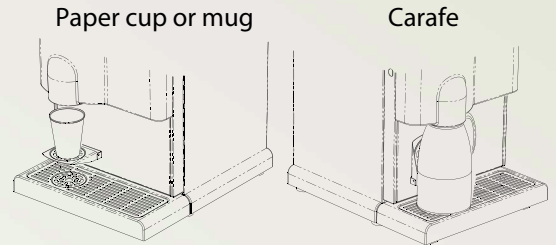

STEP 1: Choose a size

- Short: 8oz
- Tall: 12oz
- Half carafe: 36oz
- Full carafe: 60oz

 
*Cocoa option is not available in Carafe sizes.



STEP 2: Choose a beverage

- Regular coffee
- Half regular and half decaf coffee
- Decaf coffee
- Cocoa

Hot water: Press and hold hot water button to dispense up to 8oz. Repeat for more water.

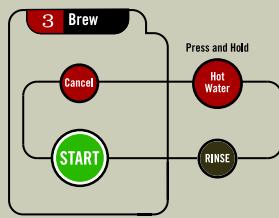


STEP 3: Brew

- Push Start to begin the brew cycle or Cancel to return to step 1.
- While brewing, the cup area will illuminate and the LCD will display a cycle progress bar. No other features are available during the brewing process.
- When Cancel is pressed during the carafe brewing process, the current cycle will be completed.

Loading Products

 1. Use the key provided to unlock the hopper or canister you wish to fill.
2. Lift the lid and carefully pour Coffee Beans Only into the bean hopper until it reaches 1 inch from the top. Fill Cocoa hopper with powder product only!
3. Make sure that the lid closes comfortably. Do not overfill.
4. Lock the hopper
5. Clean any spills on the top cap immediately.

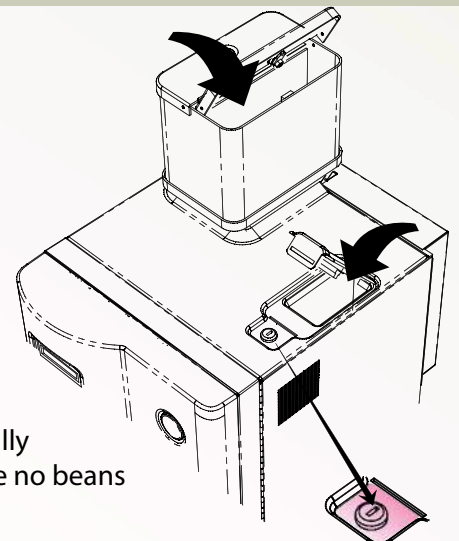

To prevent coffee beans from falling into the cocoa canister and eventually obstructing the cocoa dispensing tube, always make sure that there are no beans in the cocoa lock area.

Daily cleaning and maintenance

For everyone to enjoy a delicious cup of coffee or cocoa at the touch of a button, any time of day, we recommend completing the following steps daily.

Cleaning the Interactive Cup™

It is important to keep the machine and its surroundings clean and tidy to ensure consistent product quality.


To minimize scratching and preserve appearance, we recommend using a clean damp sponge or soft cloth lightly treated with a nonabrasive detergent for cleaning the exterior of the unit and the stand. After removing all food soils, thoroughly dry with a clean, soft cloth.



Important: Abrasive products such as automatic dishwashing detergent, abrasive scrubs or brushes will mar the finish. **These parts are NOT dishwasher safe!**

<input checked="" type="checkbox"/>	Cleaning check list
<input type="checkbox"/>	Coffee hopper exterior
<input type="checkbox"/>	Top cap
<input type="checkbox"/>	Plastic front
<input type="checkbox"/>	Metal cabinet
<input type="checkbox"/>	Back splash
<input type="checkbox"/>	Cup stand
<input type="checkbox"/>	Drip tray
<input type="checkbox"/>	Stand

 Cleaning the drip tray

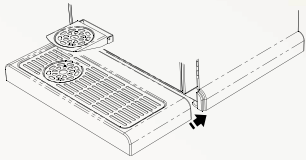

WARNING! Drip tray may be full. Use caution and keep it level to avoid spilling.

1. Remove the drip tray by simply lifting gently and pulling it out from underneath the door
2. Rinse both parts under hot water and dry thoroughly with a clean dry cloth.
3. Reinstall the drip tray onto the machine and make sure that both prongs are secure and that the side skirts are well aligned.

Empty the waste bin

Every 200 cycles, the machine will indicate to empty the waste bin. The Interactive Cup™ will not deliver beverages until this is done. It is therefore recommended to empty this bin daily so that the machine remains available at all times.

The screen will toggle between the following messages:

Empty waste bin
Empty bin in cabinet

Empty waste bin
press cancel, start

1. Open the cabinet door located below the unit.
2. Cut or gently tear the filter paper DO NOT YANK!
3. Remove filled plastic bag and replace with a new one.
4. Press the CANCEL button then the START button to reset the counter

Troubleshooting

The LCD screen will display 2 types of alarms: those that can be cleared by the user (user messages) and those that require the attention of service personnel (service messages). Either type may prevent use of the machine until the alarm is cleared.

	Message	Remedy		Message	Remedy
USER MESSAGES	▪ Add (coffee / cocoa)	See loading products on reverse side	SERVICE MESSAGES	▪ Low water level	Call your operator
	▪ Share your thoughts	To clear, order a beverage		▪ Filter paper required	Call your operator
	▪ Please press rinse	Follow on-screen instructions (Min. 12oz cup required)		▪ Brewer error	Call your operator
	▪ Empty waste bin	See instructions above		▪ Warming up	Wait a few minutes and if it persists, call your operator
	▪ Drip tray full	See instructions above			
	▪ Option unavailable	Make another selection			