




1. Turn ON water supply to machine and inspect for leaks

(if machine has been inactive for more than 2 weeks, it is recommended that the open boiler be drained by a qualified technician before operation to ensure quality of water)

2. Plug in power cord and turn ON power switch

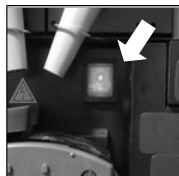

3. Insert service key (green)

- Insert key and Rotate $\frac{1}{4}$ turn to lock. Slot located inside door.




4. Remove, Empty and Clean Product Canisters (Beans and powders). Also, empty contents of grinders.




5. Empty waste bin and drip trays

- Remove the drip tray, cup stand and cup grid.
- Remove and empty waste bins and drip tray under the brewer

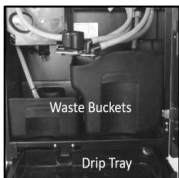

6. Remove mixing system parts

- Turn mixer plate handle counterclockwise
- Pull mixer housing towards you
- Remove mixer blade

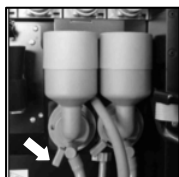

a.



b.



c.

- Remove mixer plate
- Remove steam collector/filter



d.





e.

7. Clean mixing system parts with warm water and mild dish detergent and inspect for wear and replace worn parts as needed.

8. Reinstall Mixing system parts in reverse order of removal


Note:

When installing the whipper blade, ensure arrow on mixer blade aligns with the flat spot on the mixer shaft.

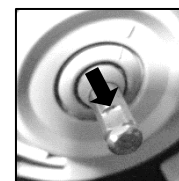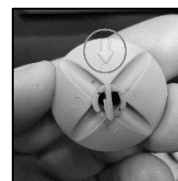


9. Run mixing system rinse

- Place a container (16oz/500ml) underneath dispensing nozzle

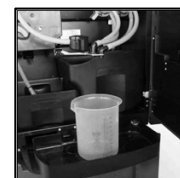


- Press the *Rinse* button on the service screen

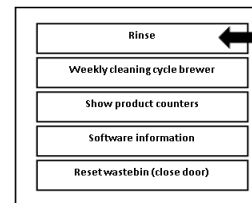

10. Perform Weekly Cleaning Procedure

- Empty container from step 9 above and place underneath the dispensing nozzle

- Place cleaning tablet into the brew chamber of the CoEx brewer

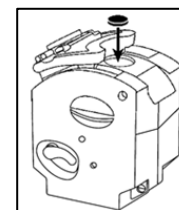

- Press the *Weekly cleaning cycle brewer* button on the service screen (takes Approx 8 min)

